


GENERAL CAST STONE BENCH  
INSTALLATION INSTRUCTIONS:

- 1) SET CONCRETE FOOTINGS TO CODE, USUALLY BELOW THE FROST LINE, PER PROVIDED DRAWING. FOOTING CAN BE SMALLER OR LARGER THAN FOOTPRINT OF BENCH LEGS.
- 2) ALLOW FOR A 1" HOLE IN THE CENTER OF THE FOOTING. THIS CAN BE DONE BY PLACING SOME SORT OF TUBE IN THE WET CONCRETE TO CREATE A VOID. THE HOLE SHOULD BE 8" DEEP.
- 3) SET BENCH LEGS. BENCH LEGS ARE PROVIDED WITH A CENTER 3/4" HOLE FROM TOP TO BASE. PLACE 12" THREADED ROD INTO HOLE IN FOOTING, BENCH LEG GOES OVER IT. FILL HALF WAY WITH ANCHORING CEMENT OR EQUIVALENT MATERIAL.
- 4) SET BENCH TOP. SCREW 6" THREADED ROD INTO PROVIDED HOLE IN BOTTOM OF BENCH TOP. FILL REMAINING HOLE IN BENCH LEG WITH ANCHORING CEMENT OR EQUIVALENT MATERIAL, SET BENCH TOP WITH PROTRUDING ANCHORS ONTO BENCH LEGS.
- 5) IF DESIRED, MORTAR CAN BE PLACED BETWEEN FOOTING AND BENCH LEG AND BETWEEN BENCH LEG AND BENCH TOP.

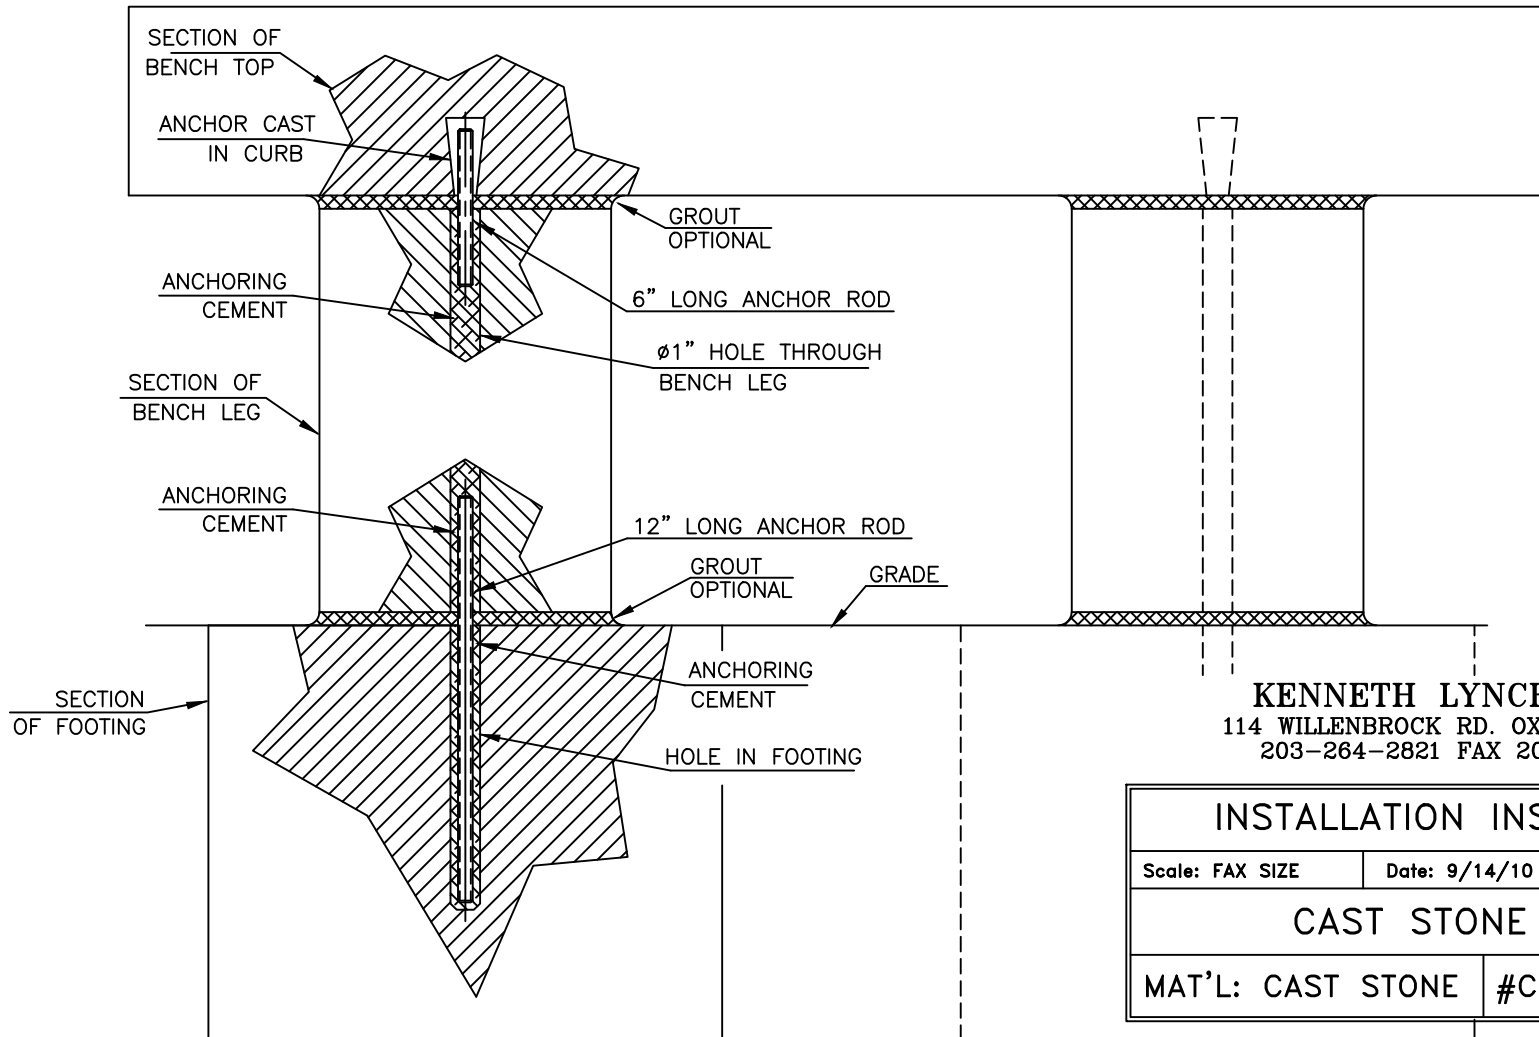

**KENNETH LYNCH & SONS**  
114 WILLENBROCK RD. OXFORD CT 06478  
203-264-2821 FAX 203-264-2833

INSTALLATION INSTRUCTIONS		
Scale: FAX SIZE	Date: 9/14/10	Drawn: S.L.A.
<b>CAST STONE BENCH</b>		
MAT'L: CAST STONE	#CS BENCH INSTAL	